



## Exchange valve seals




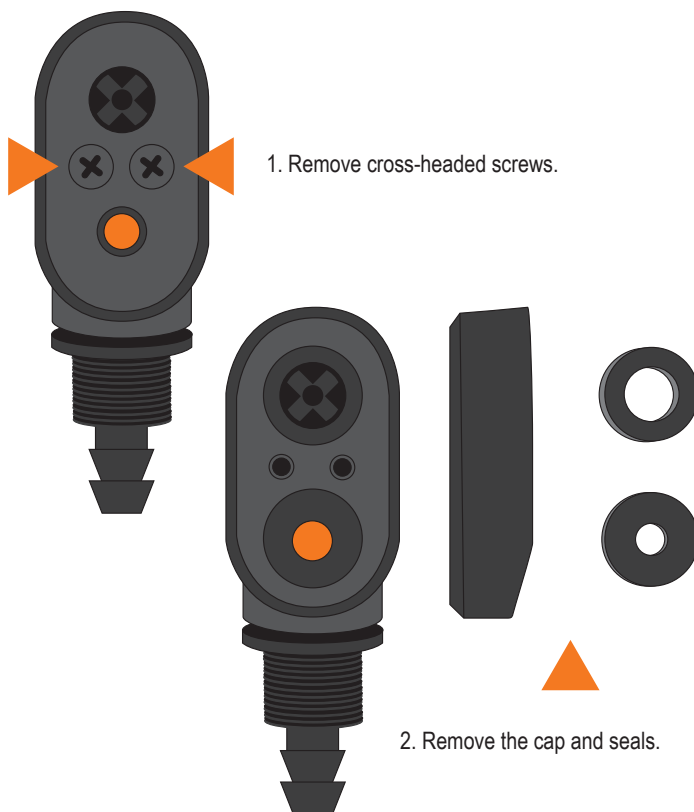


3. Insert new seals.


**ATTENTION:** Different seals for Schrader and Presta.

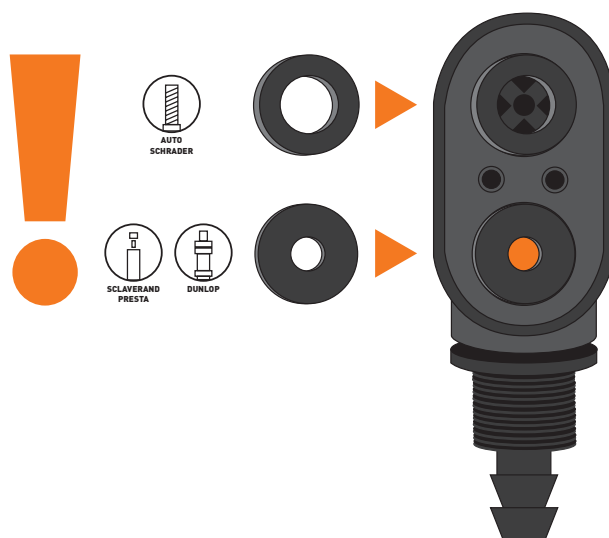

4. Replace the cap and screw it tight.

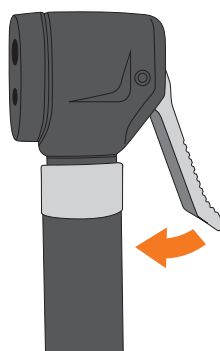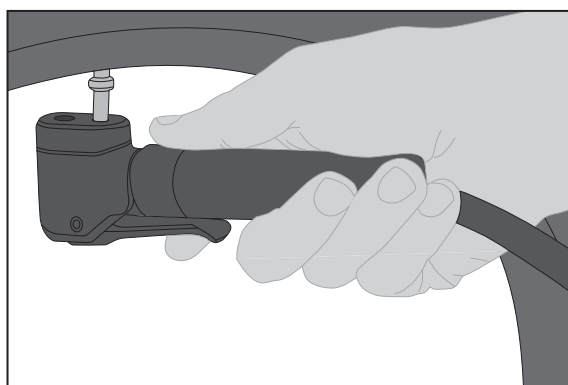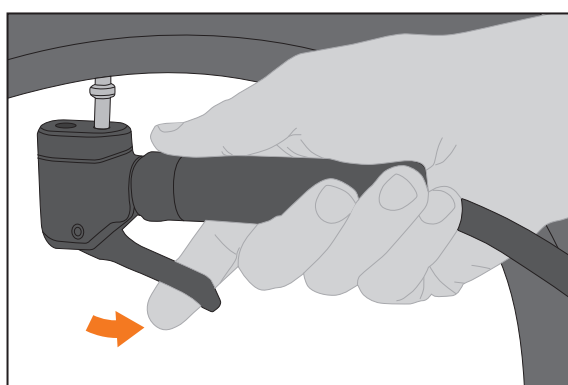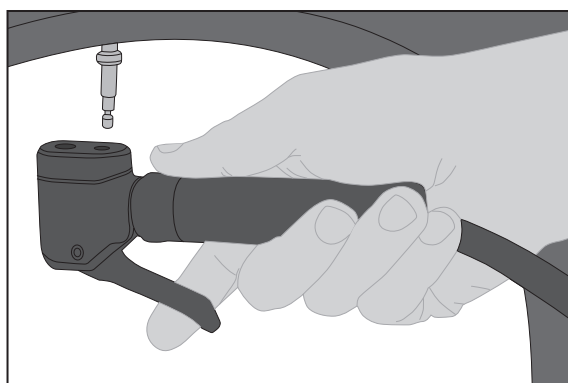

Valve disconnected

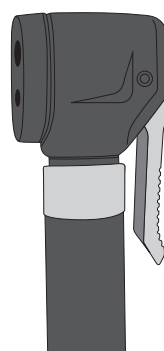

Valve connected = pump

